 



DAISY CHAIR ARMLESS (88711/88714)



Before assembly, please remove all parts from the carton, verifying that you have the correct quantities, and read all the instructions.

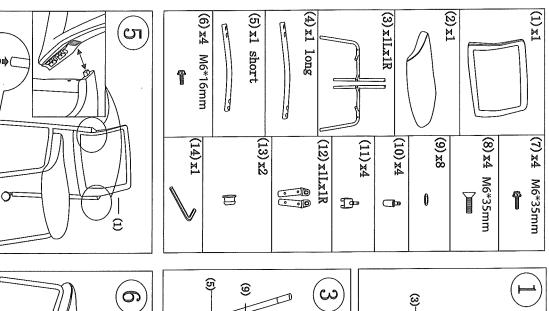

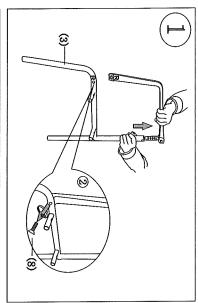

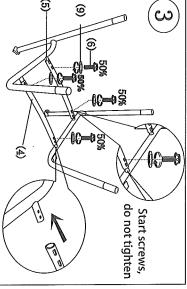

10-15

Start screws, do not tighten

