
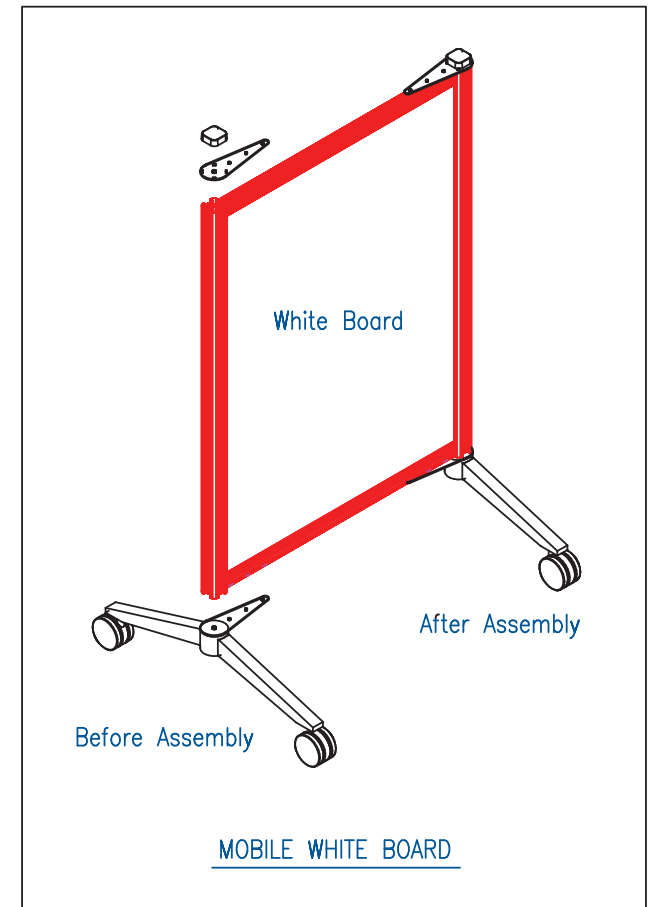


# ASSEMBLY INSTRUCTIONS

## MODEL: MWB3366SI

### MAGNETIC MOBILE WHITE BOARD

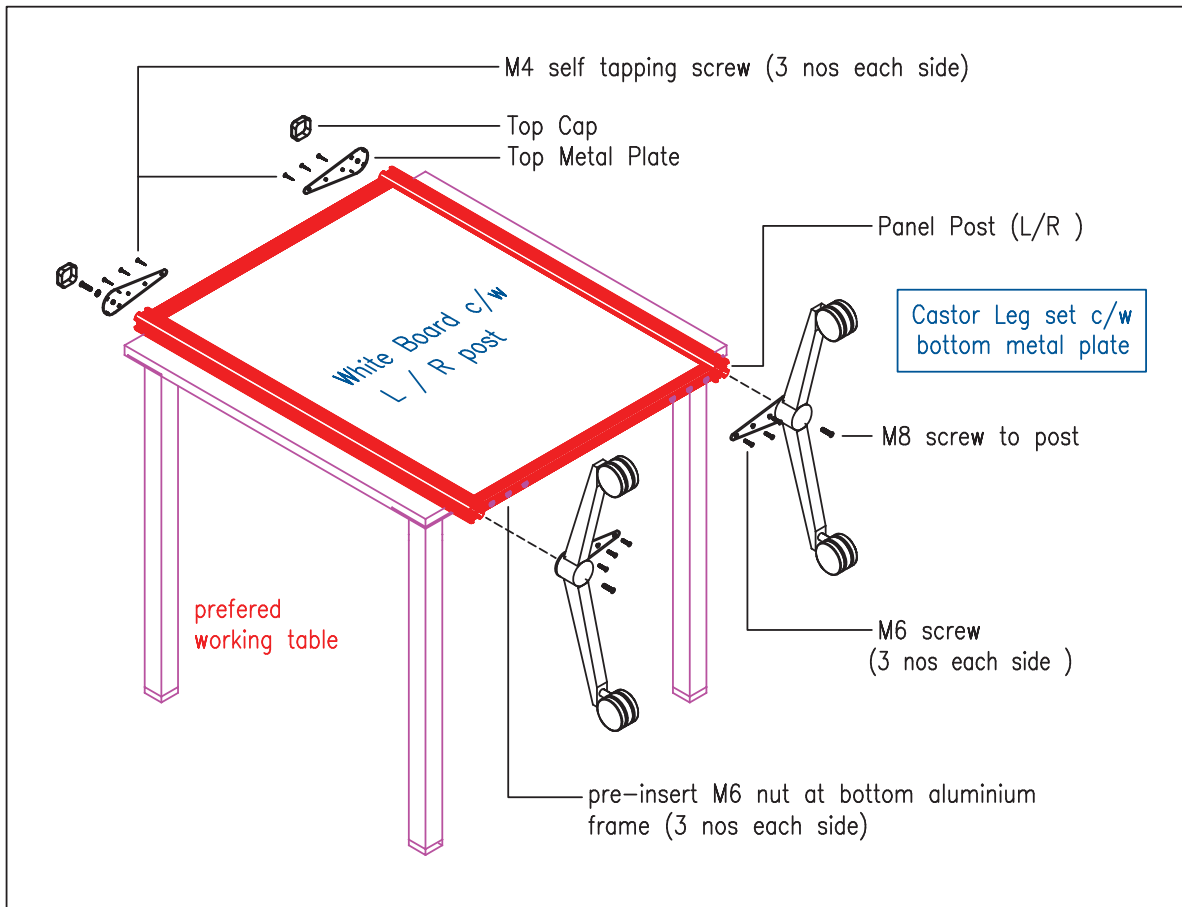

#### INSTRUCTION :

- STEP 1 :** Lay down panel c/w post on both sides on the working table. Assemble the castor leg set with M8 screw to the left post. After, screw the "bottom metal plate" to the M6 pre-insert nut at the panel bottom frame (3 screws on each side). Repeat the same procedure for right leg.
- STEP 2 :** Assemble the "top metal plate" to the left post with M8 screw and screw-in 3 self tapping screw to the panel top frame – (3 screws on each side). After then push in the top capping. Repeat the same procedure for right post.